

## Connecting your devices

The Shockwave Pro has the ability to connect up to 6 devices at one time.

**STEP 1:** Determine number of devices you want to connect

**STEP 2:** Select one of the connectivity options below

**BEST**  
HDMI

OR


**BETTER**  
(OPTICAL/  
COAXIAL)

OR


**GOOD**  
(AUX-IN)

If TV or source device is not equipped with a HDMI port, use an Optical or Coaxial output.


### OPTION 1: TV ONLY SETUP

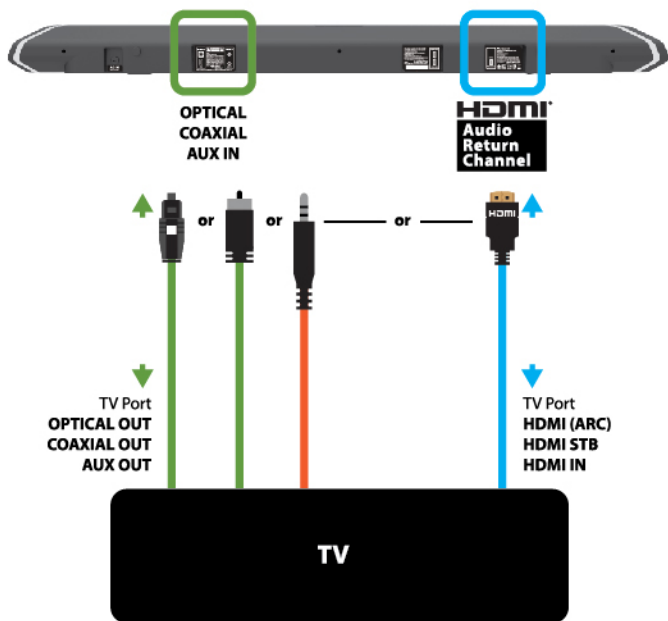

### OPTION 2: TV + ONE DEVICE VIA HDMI

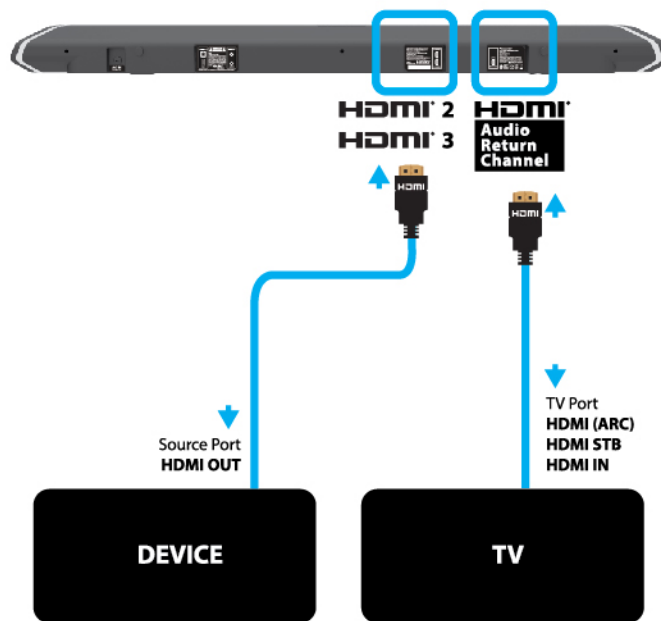

### OPTION 3: TV + ONE DEVICE VIA AUDIO CABLES

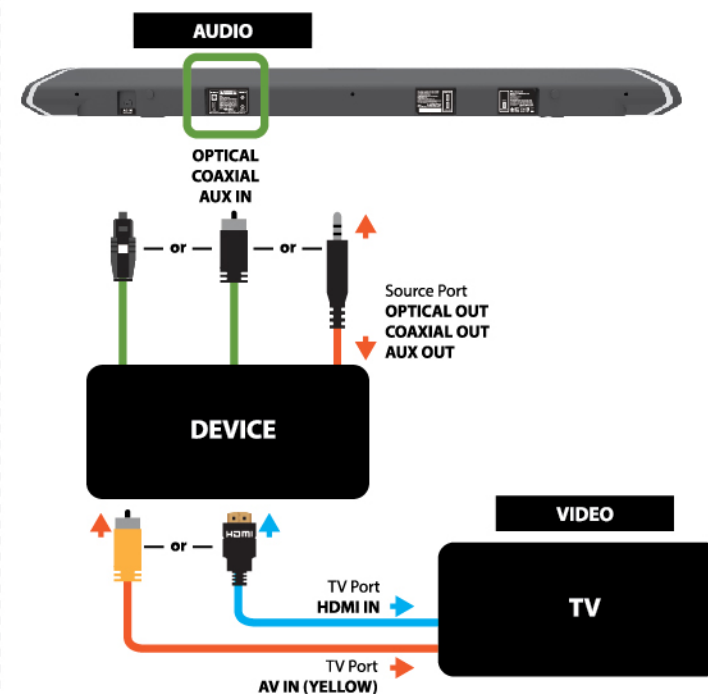

**STOP**  
PLEASE DO NOT  
RETURN THIS UNIT

Talk to a SHOCKWAFE PRO sound bar specialist  
[support@nakamichi-usa.com](mailto:support@nakamichi-usa.com)

For web support, please visit: [www.nakamichi-usa.com/faq](http://www.nakamichi-usa.com/faq)

**24HRS** OR LESS  
RESPONSE TIME  
GUARANTEED

## Optimizing your audio settings for best surround

Following is a list of recommended audio settings. If your devices is not listed below,

Contact us at: [support@nakamichi-usa.com](mailto:support@nakamichi-usa.com)  
Or visit: [www.nakamichi-usa.com/audio-settings](http://www.nakamichi-usa.com/audio-settings)

### STEP 1: TV

#### Setting the audio output:

- A) Go to **Settings > Sound**
- B) Select **Speaker Setting**
- C) Set as **Audio Out**

#### Setting the audio format:

- A) Go to **Settings > Sound > Additional setting**
- B) Select **Audio Format**
- C) Set as **Dolby® Digital / DTS® / Bit stream**

### STEP 2: DEVICE

- APPLE TV® 3**
- A) Go to **Settings**
  - B) Select **Audio & Video**
  - C) Set as **Audio Output to 16 Bit**

- APPLE TV® 4**
- A) Go to **Settings**
  - B) Select **Audio & Video**
  - C) Select **Surround Sound**
  - D) Set as **Dolby® Digital 5.1**

- AMAZON FIRE TV™**
- A) Go to **Settings**
  - B) Select **Display & Sounds**
  - C) Select **Audio**
  - D) Set **Dolby® Digital Plus** to **OFF**

- XFINITY®**
- A) Go to **Setting**
  - B) Select **Audio Codec**
  - C) Select **HDMI** or **Optical**
  - D) Set **Audio Range** to **Normal**
  - E) Set **Audio Output** to **Fixed**

- BLU-RAY™ / DVD™ PLAYER**
- A) Go to **Settings**
  - B) Select **Audio**
  - C) Set as **Dolby® Digital / DTS / Bit stream**

- PLAYSTATION® 4**
- Setting the audio output:
- A) Go to **Settings**
  - B) Select **Sound Settings**
  - C) Select **Audio Output Settings**
  - D) Set **Connector Type** to **HDMI Audio** or **Optical audio**

- Setting the secondary audio format:
- A) Play the movie (this step is important)
  - B) Press the **Options button** on the controller
  - C) Go to **Settings > Audio Format**
  - D) Set to **Dolby® Digital 5.1 / DTS 5.1 / Bitstream**

- ROKU™ 4**  
(Optical connection recommended)
- A) Go to **Settings**
  - B) Select **Audio**
  - C) Select **Audio Mode**
  - D) Set to **DD, DTS**

- XBOX® ONE**
- A) Go to **Settings**
  - B) Select **All Setting**
  - C) Select **Display & Sound**
  - D) Select **Audio Output**
  - E) Under **Digital Audio** select either **HDMI Audio** or **Optical Audio**, based on the type of cable you use to connect your console to the sound bar.
  - F) Set **HDMI Audio Options** or **Optical Audio Options** to **Bit stream Out**
- Bitstream format to Dolby Digital**

*Be sure to connect via the **HDMI OUT** port when the HDMI cable is used on the Xbox One.*

- XBOX® 360**
- A) Go to **Settings**
  - B) Select **System**
  - C) Select **Console Settings**
  - D) Select **Audio**
  - E) Select **Digital Output**
  - F) Set to **Dolby® Digital 5.1**

All product names, logos, and brands are property of their respective owners.

**STOP**  
PLEASE DO NOT  
RETURN THIS UNIT

Talk to a SHOCKWAVE PRO sound bar specialist  
**[support@nakamichi-usa.com](mailto:support@nakamichi-usa.com)**

For web support, please visit: [www.nakamichi-usa.com/faq](http://www.nakamichi-usa.com/faq)

**24HRS** OR LESS  
RESPONSE TIME  
GUARANTEED